




## Sun Coast Converters 24 Valve APPS Rewire Ground Instructions

Supplies needed, approximately. 5' wire, 2 eyelets for battery ground and a butt splice connector.

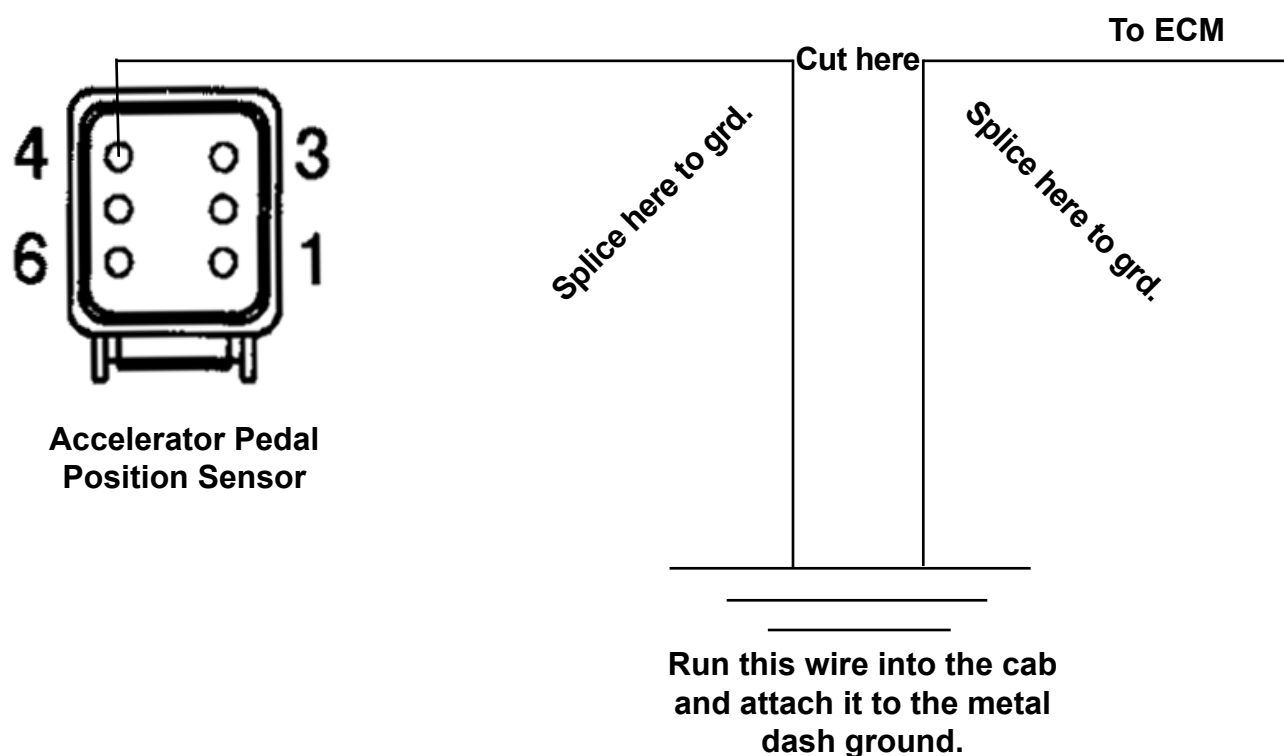

1. Disconnect both batteries.
2. Locate the APPS (Accelerator Pedal Position Sensor) on drivers side front of engine.
3. Remove plastic cover for easier access to the 6 pin connector.
4. Locate the ground (Black with Yellow tracer) wire pin # 4.
5. Cut this wire and splice a wire to run into the cab to attach it to the dash ground, then run another wire back from the dash to the other end of the wire you cut at pin # 4. **Do not wire tie this to the alternator harness below the TPS!**
6. Reconnect batteries.
7. Now you need to re-learn the TPS, Turn the key to the run position, do not crank. Next depress the accelerator pedal to the floor slowly and release, turn key off. You may start the engine.